 


DREAM CHEEKY™

BIG RED BUTTON user manual

⚠ Before using the product, carefully read this manual and retain it for future reference.

This packaging contains:

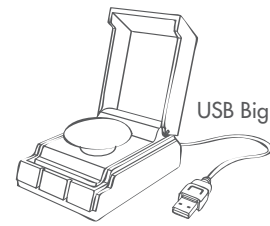

USB Big Red Button x 1



Install CD x 1



Instruction x 1

Minimum system requirements:

- Windows 7/ Vista / XP SP2 or later
- PC with Pentium 3 or compatible processor
- One available USB 1.1 port
- 512 MB of system RAM
- 200 MB available hard disk space
- XGA or higher-resolution monitor
- Sound card
- CD-ROM drive

⚠ Safety

Precautions:
Before using this product, carefully read this manual and retain it for future reference.

Safety:
This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential of causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guideline: Stop use, unplug the USB cord, immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot.

Use and Handling
1. Do not expose the Big Red Button to high temperatures, high humidity, or direct sunlight.
2. Do not expose the Big Red Button to dust, smoke or steam.
3. Do not allow small particles to get into the Big Red Button.

4. Do not place the Big Red Button on surfaces that are unstable or subject to vibration.
5. Do not throw or drop the Big Red Button or subject it to physical shock.

Cleaning:
1. For safety reasons, unplug the USB cord from your computer before cleaning.
2. Wipe gently with a damp cloth, and then dry the surface.
3. Do not use solvents or other chemicals to clean the exterior of Big Red Button.

General:
1. Should the product perform unexpected function, unplug the unit and then restart the computer.

Note: See www.dreamcheeky.com for full online support link and trouble shooting

🔧 Installation

Installing the Big Red Button program into your PC couldn't be easier. Just follow these simple instructions and you will be ready to go in no time!

 
- 1 The install program will show up automatically. (If not manually click "setup.exe" on the CD drive). On the Set up window, click "Start Install".



- 2 Installation complete window will show up after file are copied. Click "Close" to finish.




- 3 i.) Connect the USB cable attached to the Big Red Button to a USB port located on your PC prior to playing with it.

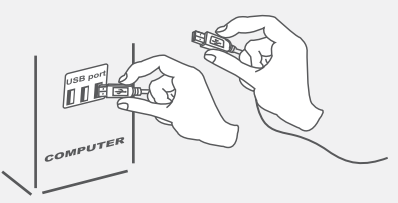

- ii.) Double click on the Big Red Button program on your desktop.

 - 4 Press the Desktop Icon to run the Big Red Button software. (If on a network system, this may not appear. Please find the software under start menu.) Tray Icon will be appear when the software is running.

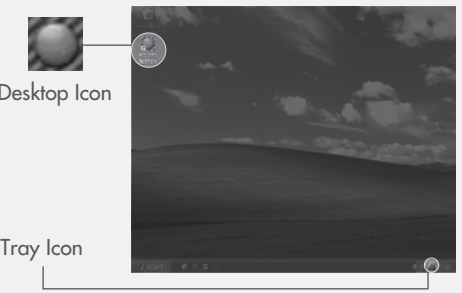

- ⚠ **Note:** Install the software before connecting your Big Red Button.
- ⚠ **Note:** Using a USB HUB or docking station may result in the loss of power to the Big Red Button. This could create the Unit to not work properly. Please plug it directly into the USB port on your computer.

Introduction

This demonstrates how to use the Big Red Button. Load the Big Red Button software provided and use these instructions to maximize your playing capability.

 
Note: Please be sure to plug your Big Red Button into a USB port in your PC prior to playing with the unit.

▶ How to Play

Connect the USB cable attached to the Big Red Button to a USB port located on your PC prior to playing with it.



NOTE:
For all modes (Except the Take-a-break mode.) closing the lid will instant close the program.

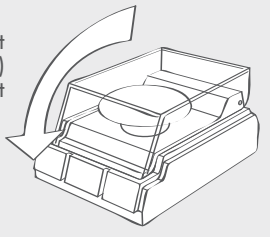

1 BOOM

- i) Click to setup the boom mode

- ii) Click for checking new effect
Select your boom effect
Click to load the boom

- iii) Open the lid to load the count down screen

- iv) Push the button to boom the screen

2 PUNCH UP

- i) Click to setup the punch up mode

- ii) Click to see the next foe
Click to load the present foe
Click to delete the present image
Click to edit the present image
Click to load a new image

- iii) A browser will pop up after you click the load image, choose your image and click open to load.

- iv) After you load the image. Below screen will show
Click the zoom button to adjust the image sizes.
Click to confirm the image
Adjust the image to fit the mark by using the mouse

- v) After you load the foe.

- Open the lid, and your foe will show up
- Push the button to punch up

3 I'M WORKING

- i) Click to load the I'm working mode

- ii) Open the lid to load the worksheet.



- iii) Push the button, the worksheet will start working



5 WEBKEY

- i) Click to load the webkey mode

- ii) Enter your favourite website
- iii) Push the button to launch your favourite website

4 TAKE-A-BREAK

- i) Click to setup the take a break mode

- ii) Exhausted:
Take 3 mins break every 20mins;
Normal:
Take 5 mins break every 30mins;
Energetic:
Take 10 mins break every 60mins;
Custom:
Set the work and break time.

- iii) A reminder will show on the screen when the break time is up



- Push the button to enter the sleep mode

NOTE: the computer will go into sleep mode during the break time. Press any button on your computer to return your workspace.