

USB WEBMAIL NOTIFIER USER MANUAL

Minimum system requirements for running the Dream Cheeky USB Webmail Notifier:

- Microsoft Windows 2000 SP4/ XP SP2 or later / Vista
- VGA or higher-resolution monitor
- Sound card
- 50 MB available hard disk space
- One available USB port
- CD-ROM Drive

Before using the product, carefully read this manual and retain it for future reference.

This packaging contains:



Webmail Notifier X 1



CD - Webmail Notifier Software

Installing the Software

1 The install program will show up automatically (if not manually click "setup.exe" on the CD drive) On the Set up window, Click "Next".



2 On the Setup window, select "Put icon on desktop" or and "Launch application after installation".



5



desktop icon



SHORTCUT ICON
(If on a network system, this may not appear.)

(Only appears when the program is running)

4 Installation complete window will show up and Click "Close".




3 On the Setup window, choose the location where the program would be installed. Select "Everyone" or "Just me" to use the program and Click "Next".



USB Connection

1. Connect the USB cable attached to the Webmail Notifier to a USB port located on your PC prior to playing with it.

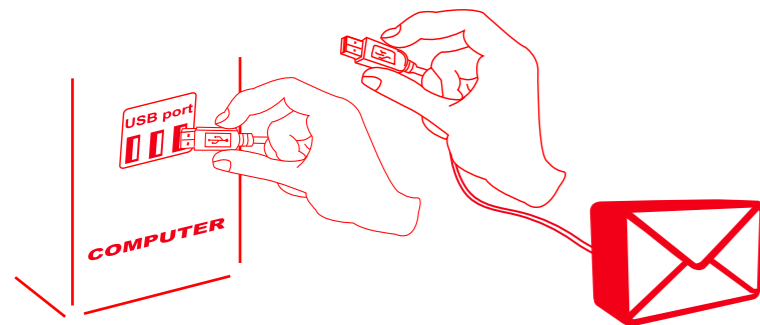

2. Double click on the Webmail Notifier program on your desktop.

Note: Install the software before connecting your Webmail Notifier! If you have already plugged the Webmail Notifier into the computer, please unplug it before installing the software.

Note: Using a USB HUB or docking station may result in the loss of power to the Webmail Notifier. This could create the Unit to not work properly.

Introduction

 
This demonstrates how to use the Webmail Notifier. Load the Webmail Notifier software provided and use these instructions to maximize your playing capability.

Note: Please be sure to plug your USB Webmail Notifier into a USB port in your PC prior to playing with the unit.

To play the USB Webmail Notifier

Connect the USB cable to a USB port located on your PC prior to playing with it. Double click on the Webmail Notifier icon to launch the program.

Accounts Setting

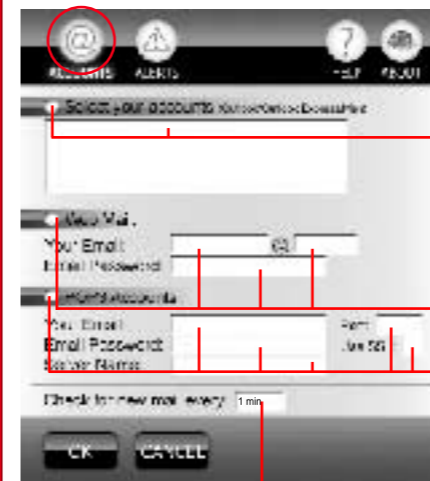

Remark:Select one setting, either outlook, or webmail, or pop3.

Select your outlook email accounts (Only function when outlook express or Windows Live messenger is opened. Please ensure at least 1 new mail is in your outlook/outlook express mail box, for showing your account on the list.)
Ex. 123@aaa.com
123@bbb.com


Fill in your web mail account
Ex. 123@hotmail.com

Fill in your POP3 mail account (Needs to request the service provider to provide the POP3 servers, SSL and port information.)

Select every time check for new mail. Ex. 1 mins

Remark:Company users need to get these data from computer department.

Alerts Setting

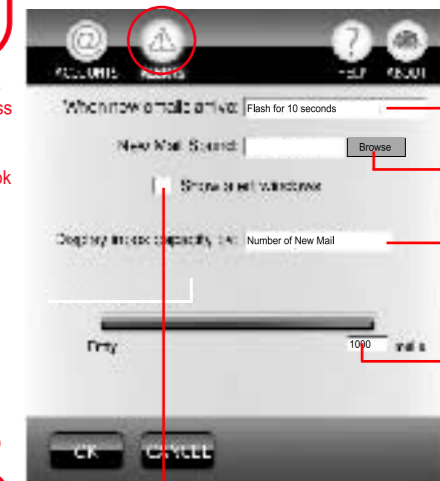

How many seconds flash when new mails arriving

Find a sound from computer to show new mails arrive

Select between new mail or total mails

The maximum mail of your mail box


Display alert messages when received mails.

How to enable POP3 in Gmail:


Sign in to Gmail. → Click Settings at the top of any Gmail page. → Click Forwarding and POP. → Select Enable POP for all mail or Enable POP for mail that arrives from now on. → Choose the action you'd like your Gmail messages to take after they are accessed with POP. → Click Save Changes.

How to set mail box capacity:

Empty: Green color gradual change Maximum: Red color
The maximum mail of your mail box Ex. 100 mails

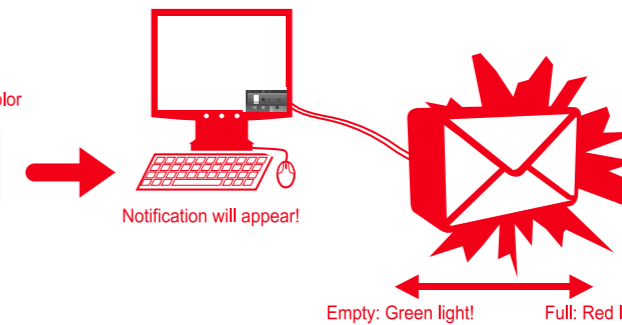

When new mail coming:

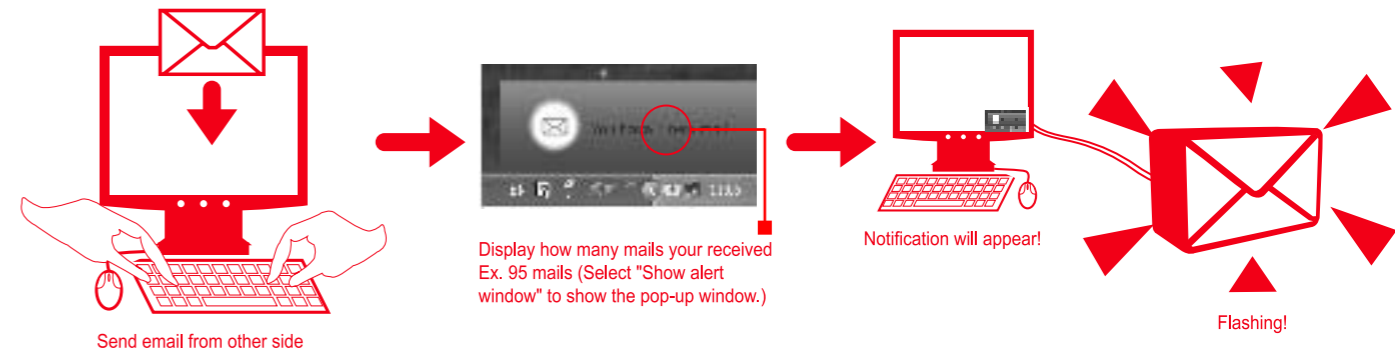 

Precautions:

Before using this product, carefully read this manual and retain it for future reference.

Safety:

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential of causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

Stop use, unplug the USB cord, immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch.

Use and Handling

- Do not expose the Webmail Notifier to high temperatures, high humidity, or direct sunlight.
- Do not expose the Webmail Notifier to dust, smoke or steam.
- Do not allow small particles to get into the Webmail Notifier.
- Do not place the Webmail Notifier on surfaces that are unstable or subject to vibration.
- Do not throw or drop the Webmail Notifier or subject it to physical shock.

Cleaning:

- For safety reasons, unplug the USB cord from your PC before cleaning.
- Wipe gently with a damp cloth, and then dry the surface.
- Do not use solvents or other chemicals to clean the exterior of Webmail Notifier.

General:

- Should the Webmail Notifier perform unexpected function, unplug the unit and then reset the interface.

Note: See www.dreamcheeky.com for full online support link and trouble-shooting.